

PARTNER ACS BASIC SETUP

SYSTEM PROGRAMMING

(System Program = Left Intercom)

- d. With the handset on the cradle, initiate programming by pressing [Feature] [0] [0]. The telephone will sound a tone.
- e. Press [System Program] [System Program] to enter System Program mode.
- f. Press [#] [1] [0] [1] to set the system date. Enter the date using the numeric keypad in the MMDDYY format.
- g. Press [#] [1] [0] [3] to set the system time. Enter the time using the numeric keypad in the HHMM format using a 24-hour clock. If the time is before 12:00 noon, enter the time directly. If it is after 12:00 noon, add 12 to the hour (i.e. 3:08pm = 1508).
- h. Press [#] [1] [0] [4] to set the number of CO lines. Press [Prev Data] to reduce the set the number of lines to the number of CO lines coming in to the telephone system.
- i. Press [#] [6] [1] [7] to set the Loudspeaker Paging Line. If the system includes a EC308 expansion card, enter [0] [8]. If not, enter [0] [5]. Press [Enter] to save the setting.

EXTENSION PROGRAMMING

(Central Tel Program = Right Intercom)

- j. Press [Central Tel Program] to enter Extension Programming mode. The telephone will prompt you to enter an extension. Enter [1] [0]. The display will indicate “**Program Extension 10**”.
- k. Press [Btn 1]. The display should indicate “Blank”. Press [Intercom] [*] [1] [1]. The display should indicate “**Intercom *11**”.
- l. Press [Btn 2]. The display should indicate “Blank”. Press [Intercom] [*] [1] [2]. The display should indicate “**Intercom *12**”.
- m. Press [Btn 3]. The display should indicate “Blank”. Press [Intercom] [*] [1] [3]. The display should indicate “**Intercom *13**”.
- n. Press [Btn 4]. The display should indicate “Blank”. Press [Intercom] [*] [1] [4]. The display should indicate “**Intercom *14**”.

- o. Press [Btn 5]. The display should indicate “Blank”. Press [Intercom] [*] [1] [5]. The display should indicate “**Intercom *15**”.
- p. Press [Btn 8]. The display should indicate “Blank”. Press [Feature] [0] [5]. The display should indicate “Last Number Redial”.
- q. Press [Btn 12]. The display should indicate “Blank”. Press [Intercom] [7] [0]. The display should indicate “Loudspeaker Page”.
- r. Repeat steps j. through q. for each extension.
- s. Press [System Program] to return to System Programming Mode.
- t. Press [#] [1] [2] [3] to set Backup Programming Automatic. Press [Next Data] to set the value to “1=Active Internal”.
- u. Press [#] [1] [2] [4] to set Backup Programming Manual. Press [Next Data] to set the value to “1=Internal Memory”. Press [Enter] to begin a manual backup. The telephone will display “Backup Successful” when the backup is complete.
- v. Configuration is complete.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Next Procedure	Next Item	Next Data	Remove
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Prev Procedure	Prev Item	Prev Data	Enter
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
System <input type="text"/> Program	Central Tel <input type="text"/> Program	Partner-18D Telephone Programming Overlay Refer to manual for use	<input type="text"/> Message
<input type="text"/>	Feature <input type="text"/>		
<input type="text"/>	<input type="text"/>		
Erase <input type="text"/>	<input type="text"/>		
<input type="text"/>	Wild <input type="text"/>		